

If SOTM Windows driver is not installed on Windows 8, please follow this instruction.

- To run a driver in Compatibility Mode:
  1. Right click on the driver's **Setup** icon and click **Properties**.
  2. In the **Compatibility** tab, select **Run This Program in Compatibility Mode For:** .
  3. Choose **Windows 7** in the dropdown menu.
  4. Click **OK**.
  5. Try running the driver again, and it may install more smoothly.

